



**INSTRUCTIONS FOR BASKET BALL NET ADJUSTMENT**

1. ENTER CODE (2904)
2. PRESS BACKSTOP BUTTON
3. PRESS #S FOR CORRESPONDING BASKET IE. (1,2,3,4,5,6)
- ODDS 1,3,5 RAISE AND LOWER ENTIRE NET FRAME TO CEILING
- EVEN'S 2,4,6, ADJUST NET HEIGHT.
4. PRESS AND HOLD UP OR DOWN TO ADJUST
5. GYM DIVIDER CAN BE RAISED OR LOWERED BY PRESSING CURTIN THEN
- THE NUMBER 1 THEN UP OR DOWN.

PLEASE NOTE!  
 YOU ONLY HAVE 15 SECONDS TO ENTER  
 NUMBERS FOR HOOPS AFTER MAIN CODE  
**HAS BEEN ENTERED.**